



Assembly doctor POC

Design by Johanna Lindgren & Helen Högberg for DARK

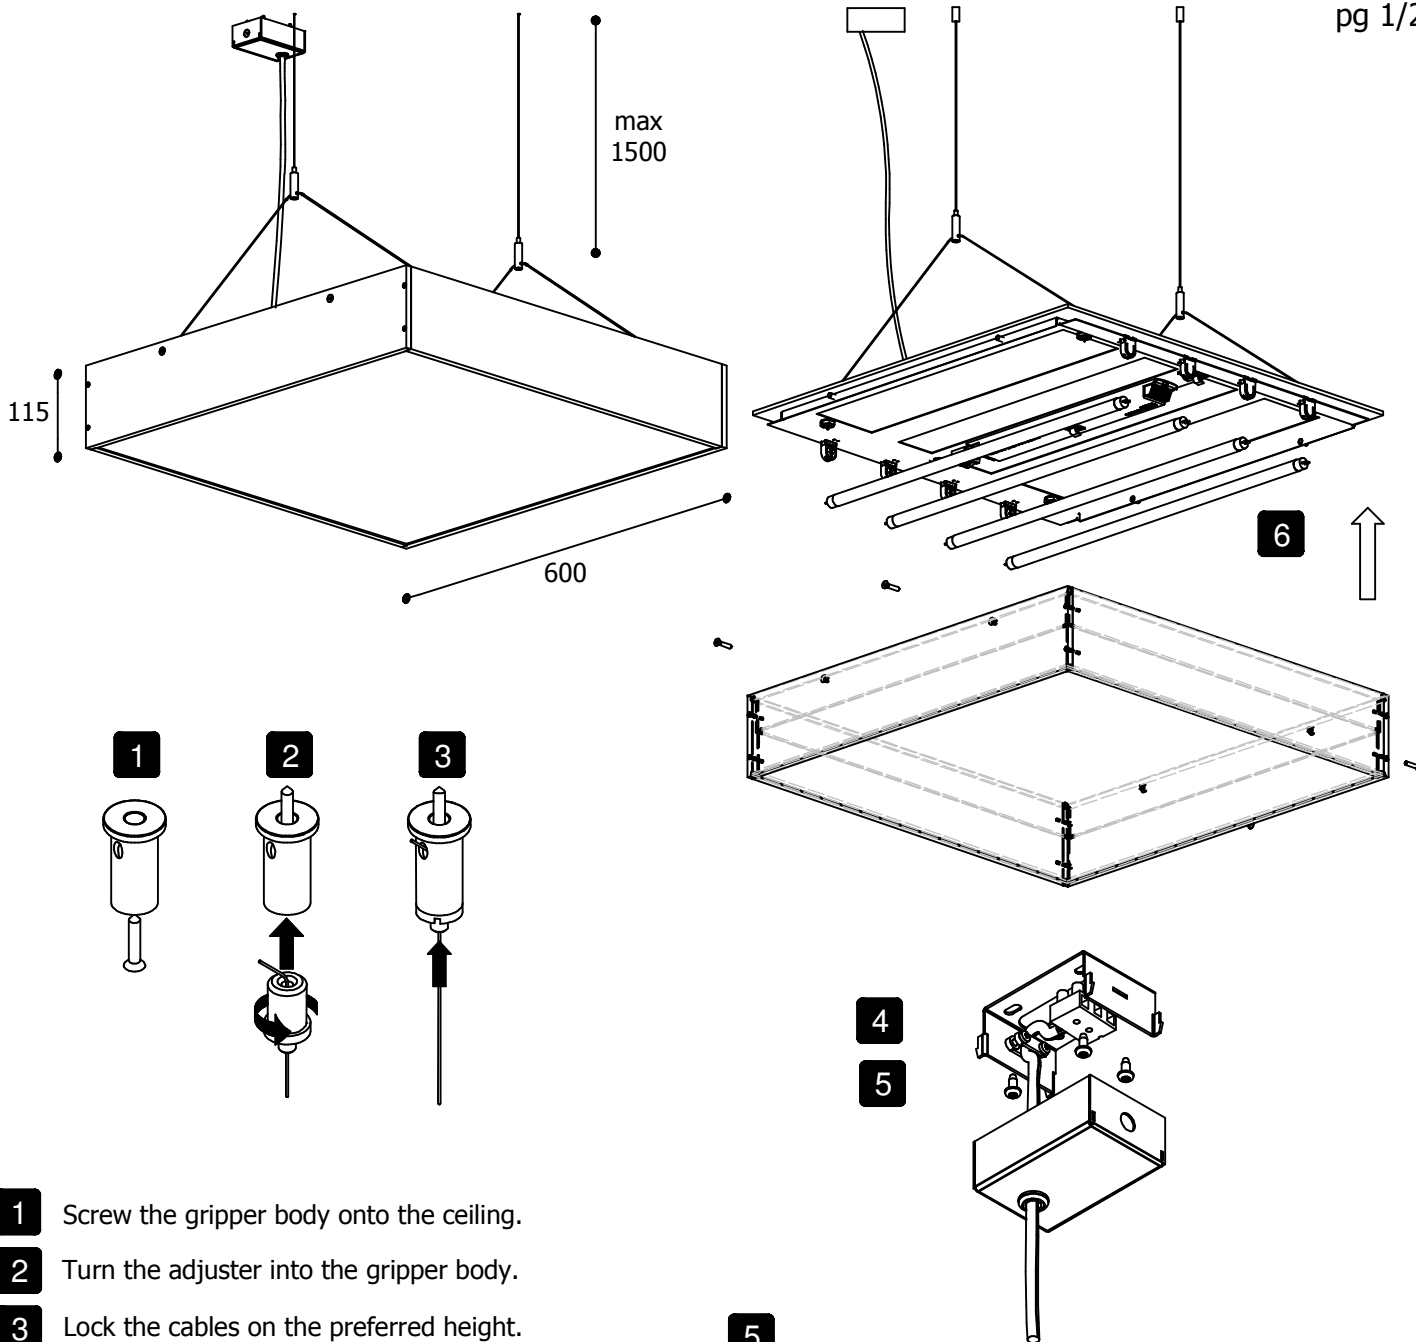

- 1** Screw the gripper body onto the ceiling.
- 2** Turn the adjuster into the gripper body.
- 3** Lock the cables on the preferred height.
- 4** Mount the ceiling bracket onto the ceiling with four screws.
- 5** Connect the power supply and close the ceiling base.
- 6** To (re)place the lamps, loosen the four screws and remove the upper plate.

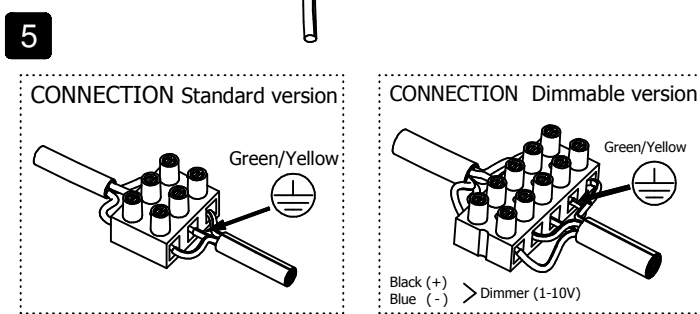

Lamp possibilities:

Dark nv
 Beversesteenweg 565
 8800 Roeselare
 Tel.: +32(0)51/252555
 Fax: +32(0)51/252566
 email info@dark.be

4x max 14 Watt T16 EVG EVGD DALI

12 kg CE Ground symbol 0.3m 850 °C IP 40 House icon Light fixture icon 230 V

Installation guide for POC FABRIC & PLEXI

1
Open the fixture.



2
Take a piece of cardboard and put it in the fixture.



3
Take the fabric or plexi and twist it like the example, or be creative.

4
Put the fabric or plexi in the fixture, between the cardboard and side.



5
Move the cardboard to make a new row.

6
Adjust the fabric or plexi, make some extra curls, to have it your way.

7
Put the matt plexi back in place.



Dark nv
Beversesteenweg 565
8800 Roeselare
Tel.: +32(0)51/252555
Fax: +32(0)51/252566
email info@dark.be